

FLOWMATIC® Express Coil Kit

© Copyright 2023 Caleffi

149 Series

NA11025

www.caleffi.com

Revit Content Instructions Guide

Manufacturer & Product:	Caleffi FLOWMATIC 149 Series Express Coil Kit
Files:	Coil_Kit-Caleffi-FLOWMATIC-149.rfa
Type Catalogs:	Coil_Kit-Caleffi-FLOWMATIC-149.txt
Rendering file:	Not Applicable
Schedule file:	Not Applicable

The Caleffi FLOWMATIC 149 Series Express Coil Kit family contains the following main variations or types:

- Sizes 0.5 in., 0.75 in. and 1 in.
- Option to add 656524, 656504, 145013, 145018 actuator or manual shut-off
- Flow range options for each size (refer specifications sheet/type catalog)

Instance Properties

Here is a curated list of notable parameters for the Revit user within the Caleffi FLOWMATIC 149 Series Express Coil Kit family.

Construction			
► Cover	This controls visibility of the whole cover.		
► Small Cover	This controls visibility of the out of the box cover (on by default)		
► Front Cover	This controls visibility of the front cover.		
► Actuator Option Selector	This controls actuator option for the PICV from the list below		
1 Manual Valve	This is active when Actuator Option Selector is set to 1		
2 Code 145013 Actuator	This is active when Actuator Option Selector is set to 2		
3 Code 145018 Actuator	This is active when Actuator Option Selector is set to 3		
4 Code 656504 Actuator	This is active when Actuator Option Selector is set to 4		
5 Code 656524 Actuator	This is active when Actuator Option Selector is set to 5		
Constraints			
Offset from Face	This shows the actual distance from connection plane to wall host		
Offset from Face Override	This overrides the default value of offset from face set in the family		
Mechanical – Flow			
Flow Warning	This tells you a warning if the flow rate falls outside the allowable minimum/maximum		
Bypass Water Percentage	This controls the percentage of flow diverted through the Bypass		
Hot Water Inlet Flow	This shows the value of flow from Hot Water Inlet		
Hot Water Outlet Flow	This shows the value of flow from Hot Water Outlet		
Bypass Water Flow	This shows the value of flow through the Bypass		
Return Water Inlet Flow	This shows the value of flow from Return Water Inlet		
Return Water Outlet Flow	This shows the value of flow from Return Water Outlet		
Mechanical – Loads			
Pressure Drop Feet of Water	Specify the pressure drop in feet of water.		
System Pressure Drop	This tells you the system pressure drop.		

Type Properties

Here is a curated list of notable parameters for the Revit user in the Caleffi FLOWMATIC 149 Series Express Coil Kitfamily.

Metal - Caleffi - Brass - DZR Corrosion Resistant		
Polyethylene Foam - Caleffi - Black		
D3040	D3040	
https://www.caleffi.com/usa/en-us/contacts/contact-us	https://www.caleffi.com/usa/en-us/contacts/contact-us	
	Polyethylene Foam - Caleffi - Black D3040	



Copyright*	©Caleffi North America		
Cost			
Description*	FLOWMATIC [®] Express Coil Kit		
Family Version*	1		
Keynote			
Manufacturer*	Caleffi North America, Inc.		
Model*	149400A G40		
Actuator Model*	Manual Shutoff Valve		
Accessory Part Number*	Out of the box insulation jacket		
Product Page URL*	https://www.caleffi.com/usa/en-us/catalogue/flowmaticr-express-coil-kit-149400a-g40		
Type Comments			
Type Image			
Series*	149 Series		
URL*	http://www.caleffi.com/usa/en-us		
Revit Content Guide URL*	https://www.caleffi.com/usa/en-us/docs/search?search_language=en- us&search_file_type=All&f%5B0%5D=field_file_type%3A54181		

Halftone text in the property tables indicates that the value is locked from editing.

*Indicates Shared Parameter and can be scheduled. Product specifications documentation can be accessed using the Product Page URL.

Rendering


Note: Standard Caleffi materials are imported. These may be modified, but please ensure that the modification selection matches an actual manufacturer supplied option.

Loading and Placing into the Project

To work with the Caleffi FLOWMATIC 149 Series Express Coil Kit in Revit, families and type catalogs where applicable are provided. Navigate to the Insert Tab > Load Family button on the Revit ribbon to load the family. Be sure the type catalog (.txt) file is located in the same folder as the family you are loading. Please ensure that the visibility settings within the project are modified to have the Piping category visible.



Figure 1 - Insert Tab > Load Family

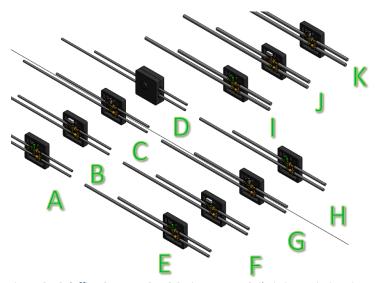

Visibility/Graphic Overrides for 3D View: 3D Mech Model Categories Annotation Categories Analytical I Show model categories in this view Filter list: <multiple> Architecture Pro Structure Mechanical Lines A Electrical

Figure 2 - Visibility/Graphic Overrides

Flowmatic 149 Coil Kit with F0001771 insulation jacket and -

- A. 0.50 in. NPT Female connection, manual shutoff (149400A 1G8)
- B. 0.50in. NPT Female connection, 145018 actuator (149400A 3G5)
- C. 0.50in. NPT Female connection, 656504 actuator (149400A G40)
- D. 0.50in. NPT Female connection, manual shutoff, front cover (149400A G90)
- E. 0.75in. NPT Female connection, manual shutoff, no PT ports on PICV (149500A 1G8)
- F. 0.75in. NPT Female connection, 145018 actuator (149500A 3G5)
- G. 0.75in. NPT Female connection, 656504 actuator (149500A 5G3)
- H. 0.75in. NPT Female connection, manual shutoff (149500A G90)
- I. 1in. NPT Female connection, manual shutoff (149600A 7G9)
- J. 1in. NPT Female connection, 145018 actuator (149600A 13G)
- K. 1in. NPT Female connection, 656504 actuator (149600A 16G)

Figure 3 - Caleffi FLOWMATIC 149 Series Express Coil Kitsize variations in a sample Revit project



Project Behavior

One way to place a Caleffi FLOWMATIC 149 Series Express Coil Kit is to go to the Systems Tab on the Revit ribbon and navigate to the Component button with Place a component fly-out selected.



Figure 4 - Systems Tab > Component > Place a Component

Properties		×	🗑 {3D}	× 🔲 Pipe Accessory Schedule
Coil_Kit-Caleffi-FLOW 0.5in. NPT Female_14		÷		
Pipe Accessories (1)	V 🗄 Edi	t Type		
Construction		* ^		
► Cover				
► Small Cover				
➤ Front Cover				
 Actuator Option Selector 	1			
Manual Valve		Prest		
Ocde 145013 Actuator				
Ode 145018 Actuator				
Ode 656504 Actuator				
Code 656524 Actuator				
Graphics Electrical - Loads		*		
Apparent Power	0.00 VA			
Control Signal				
Power Consumption	0.00 VA			
Starting Current	0.00 A			
Plumbing		¥		
Dimensions		¥		
Mechanical		¥		
Mechanical - Flow		*		
Flow Warning	Flow Exceeds Maximum Recommen			
Hot Water Percentage	90.0000%			
Bypass Water Percentage	10.0000%			
Bypass Water Flow	0.100 GPM			
Return Water Inlet Flow	2.000 GPM			•
Return Water Outlet Flow	1.900 GPM			
Hot Water Inlet Flow	0.900 GPM			
Hot Water Outlet Flow	1.000 GPM			
Critical Path				
Pressure Drop				
Mechanical - Loads		*		
Pressure Drop Feet of Water	0.000000			
System Pressure Drop	0.000 psi			
Identity Data		*		
Actuator Model	Manual Shutoff Valve			
Accessory Part Description	Out of the box insulation jacket			
Image				

Figure 5 – The Caleffi FLOWMATIC 149 Series Express Coil Kit families can be found under pipe accessories in the project browser and placed directly onto pipe of the same size. It will then read flows and consider pressure drop in the system.

Schedule Creation

Within the type and instance properties dialogues, the Revit user will find useful information for scheduling purposes such as Type, Part Description, Part Number/Model, Family Version, Manufacturer, Series, & Product Page URL. The resulting Pipe Accessories schedule in your project will show counts/quantities of the Caleffi FLOWMATIC 149 Series Express Coil Kit as well as separate quantities/counts of any separately purchased accessory products that do not come in box with the Caleffi FLOWMATIC 149 Series Express Coil Kit.

For Technical Support call 1-414-338-6338, or email techsupport.us@caleffi.com





Caleffi North America, Inc. 3883 West Milwaukee Road Milwaukee, WI 53208 T: 414.238.2360 F: 414.238.2366